


PLEASE READ ALL THESE INSTRUCTIONS CAREFULLY BEFORE BEGINNING. ENSURE THAT YOU HAVE ALL THE CORRECT COMPONENTS THAT YOU REQUIRE

Component A




Flexible Connector

Component B






Extended Waste


Component C

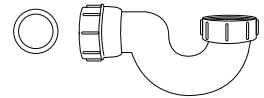


Shallow P-trap

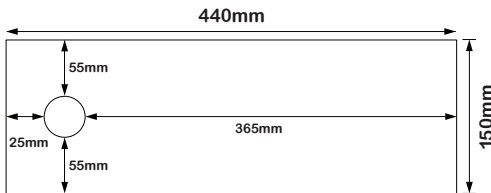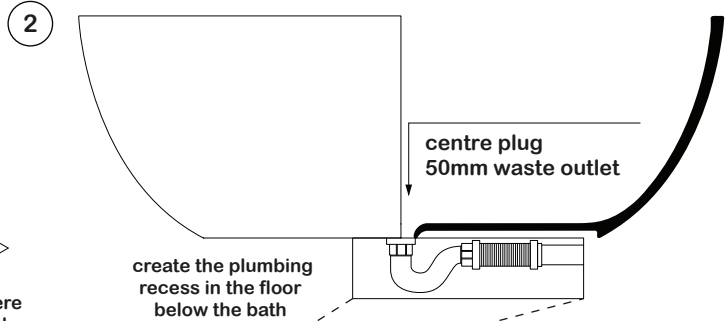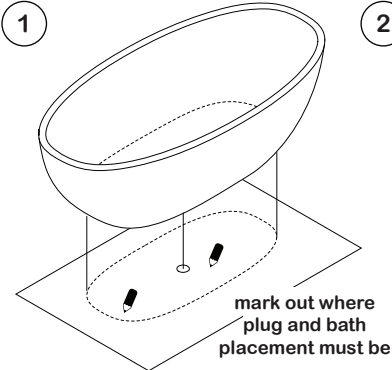


aerial view recess below bath

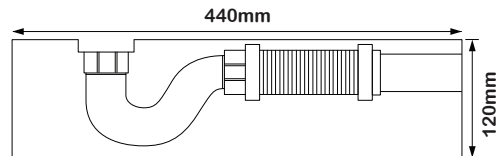


side elevation recess below bath

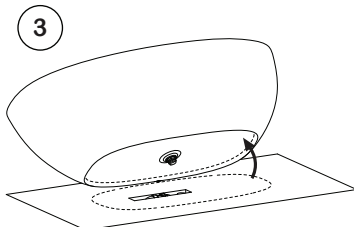

Once the waste has been inserted, place bath into position.

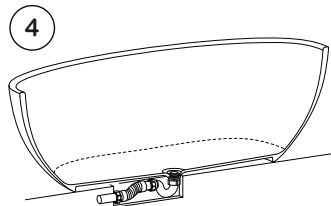

Connect P-trap to the waste.

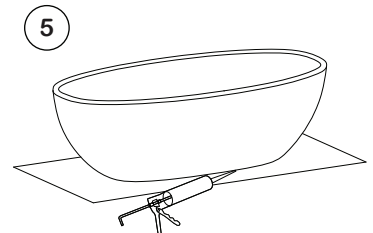

Once correctly connected, silicon the base of the bath to the tiles.